



TSC 70 - Installation Steps




TGP SLIM CASEMENT SYSTEM DETAILS

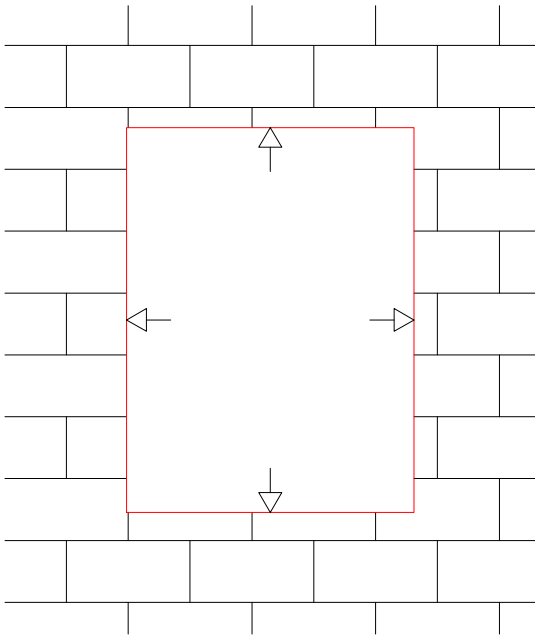

Step 1: First, clean and check the levelness of the area where the window will be installed. Uneven surfaces should be corrected, and a clean installation area should be prepared.

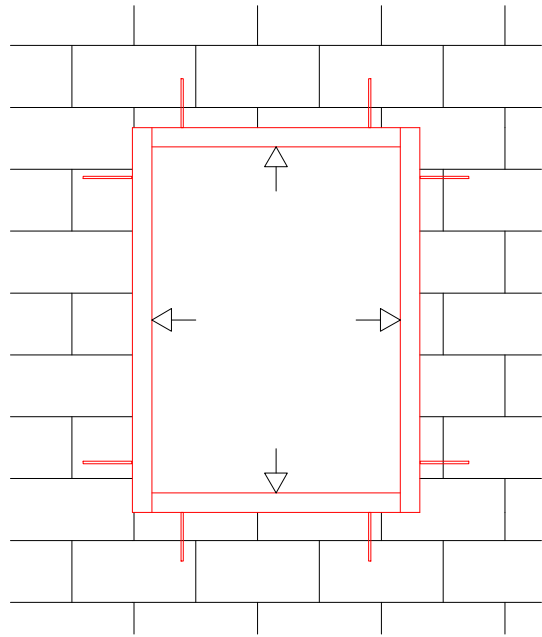


Step 2: The 40x40 steel sub-frame profile is positioned in the cleaned area as shown in the figure above and fixed into the wall.

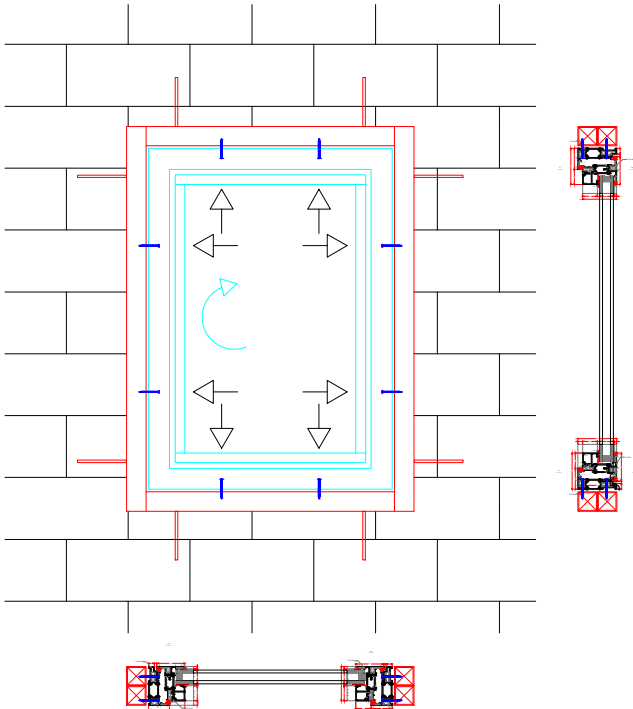

Step 3: The window is placed inside the prepared sub-frame system and fixed with screws through the points shown in the details.


Note: During the fixing process, it is recommended to use 3 screws when the width or height exceeds 1000 mm, and 4 screws when it exceeds 2000 mm.

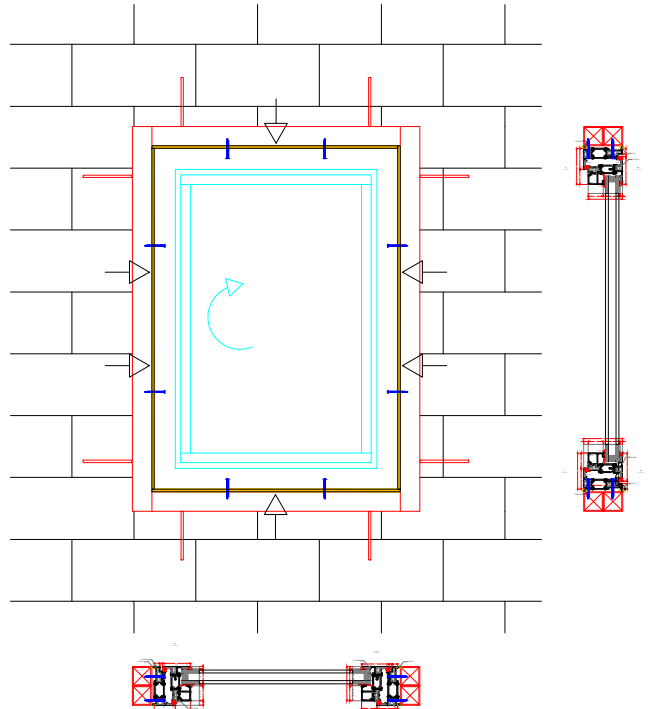


Step 4: Silicone is applied around the installed window. After this process, the installation is completed.

TSC 70 - Installation Steps - Nail Fin Frame

TGP SLIM CASEMENT SYSTEM DETAILS

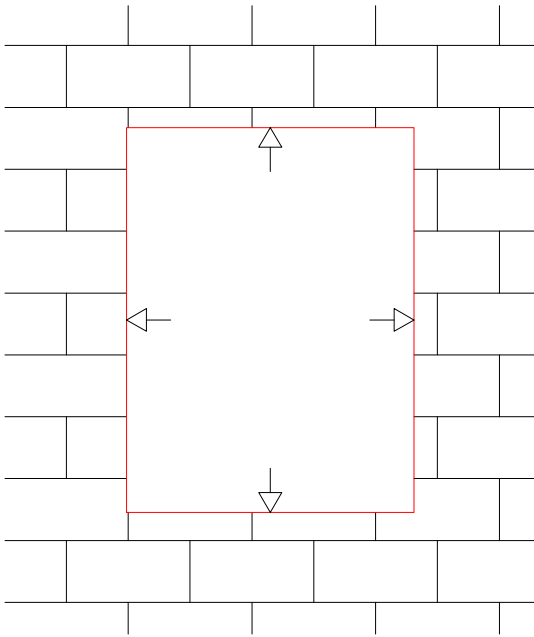


Step 1: First, clean and check the levelness of the area where the window will be installed. Uneven surfaces should be corrected, and a clean installation area should be prepared.

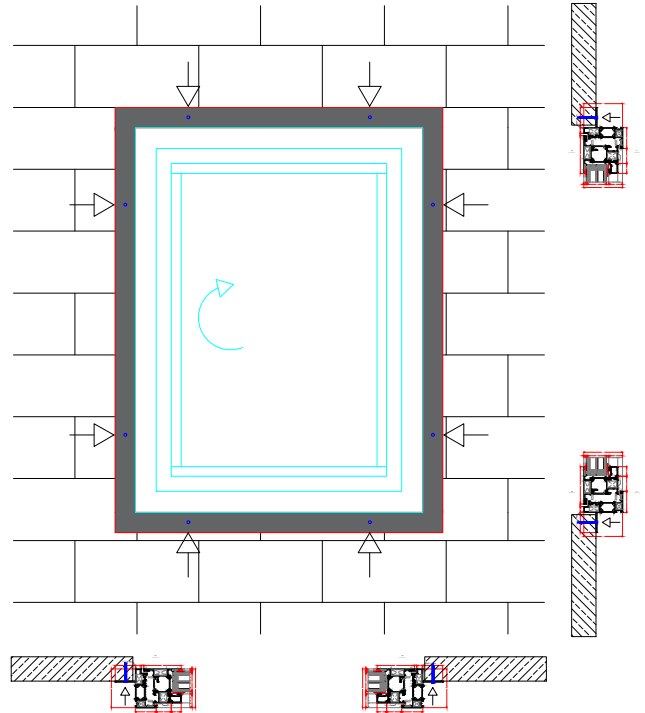


Step 2: The frame system with nail fin profiles is positioned in the installation area from the inside or outside. It is fixed by screwing through the nail fin profiles into the wall structure.

Note: During the fixing process, it is recommended to use 3 screws when the width or height exceeds 1000 mm, and 4 screws when it exceeds 2000 mm.

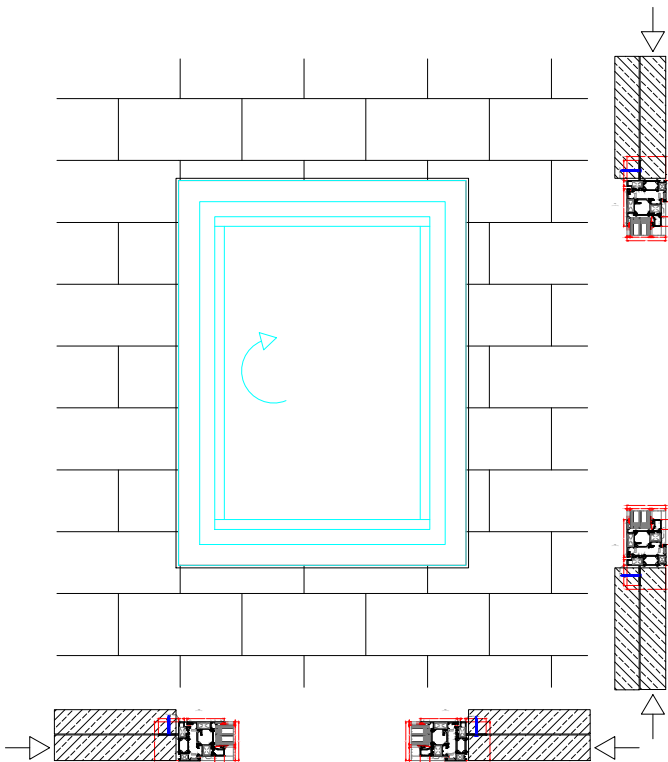

Step 3: The fixed window is covered with wall cladding or plywood after the screwing process is completed.

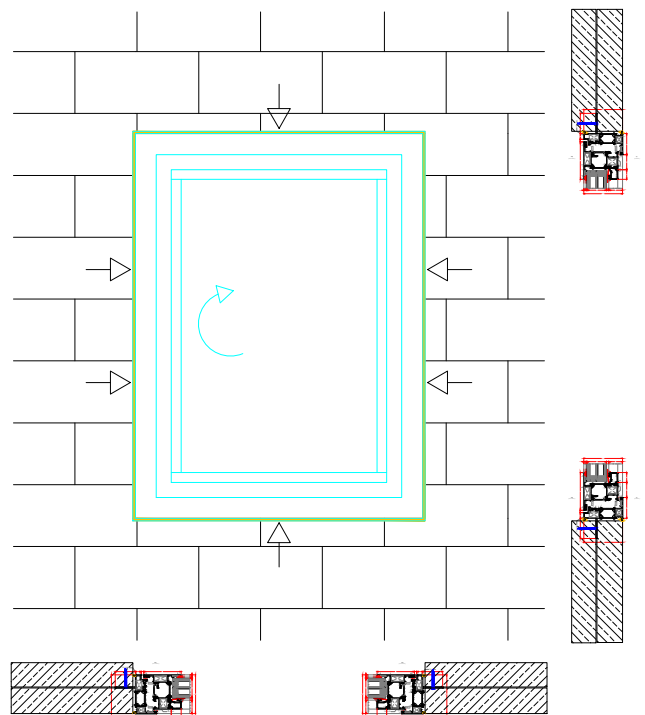

Step 4: After the window covering process is completed from the inside or outside, silicone is applied around the window on both the interior and exterior sides.